

Huawei E1762 – APN Change Guide

To change your APN (Access Point Name) follow these instructions:

1. Go to Tools > Options

Blink Wireless Broad	band	
File Operation Tools	Help	
Connec Opt	gnostics ions Operations	<u>BL R</u>
Profile Nan	ne: BLINK Connect	
NT .		

2. Click Profile Management

Options				
General Text Message Profile Management Network	Dial-Up			
	Profile Name	New		
	BLINK (Default)	Delete		
	[APN]	Edit		
	Dynamic Static	Save		
	CONNECT	Undo		
	Authentication Access number: *99# User name: Password: Advanced	Default		
OK Cancel				



Huawei E1762 – APN Change Guide

3. Click New

Options			
 General Text Message Profile Management Network 	Dial-Up		
	Profile Name	New	
	New Profile1	Delete	
	[Edit	
	O Dynamic Static	Save	
		Undo	
	Authentication Access number: *99# User name: Password: Advanced	Default	
	ОК	Cancel	

4. Profile Name: Blink NewAPN: Select StaticAPN text box: CONNECT

Options		×		
General Text Message Profile Management Network	Dial-Up			
	Profile Name	New		
	BLINK (Default)	Delete		
	[APN]	Edit		
	Dynamic Static	Save		
		Undo		
	Authentication Access number: *99# User name: Password: Advanced	Default		
OK Cancel				

5. Click Save > Default > OK